



Operating instructions | for operators
sonnenProtect 2500
for sonnenBatterie hybrid 9.53

EN

IMPORTANT

- ▶ This entire document must be read carefully.
- ▶ This document must be kept for reference purposes.

Publisher

sonnen GmbH

Am Riedbach 1

D-87499 Wildpoldsried

Service number

+61 13 7666

Email

info@sonnen.com.au

Document

Document number / Version 676 / 01

Part number / Revision 1001838 / 01

Valid for AU, NZ

Publication date 31/03/2022

The latest version can be accessed at my.sonnen.de (in the Downloads section)

18014398772257419

Table of contents

1 Information about this document	4
1.1 Target group of this document	4
1.2 Designations in this document	4
1.3 Explanation of symbols.....	4
2 Safety	5
2.1 Intended use.....	5
2.2 Requirements for the electrician.....	5
2.3 Operating the product	5
2.4 Product modifications or changes to the product environment.....	6
2.5 Voltage inside the sonnenProtect.....	6
3 Product description	7
3.1 Technical data	7
3.2 System components of the sonnenProtect.....	8
3.3 Type plate	8
3.4 Symbols on the outside of the sonnenProtect.....	9
4 Operation	10
4.1 Function.....	10
4.1.1 Grid operation - no grid outage	10
4.1.2 Backup operation - grid outage	11
4.1.3 Backup operation - overload behaviour.....	12
4.2 Setting the backup buffer	13
5 Switching off the sonnenProtect	15
6 Maintenance and Cleaning	16
6.1 Checking function.....	16
6.2 Cleaning	16
7 Uninstallation and disposal	17
7.1 Uninstallation.....	17
7.2 Disposal.....	17
8 Troubleshooting	18

1 Information about this document

This document describes the operation of the sonnenProtect 2500 in connection with a sonnenBatterie hybrid 9.53 storage system.

- ▶ Make sure you read this entire document carefully.
- ▶ Keep this document for reference purposes.

1.1 Target group of this document

This document is intended for the operator of the storage system and the sonnenProtect.

1.2 Designations in this document

The following designations are used in this document:

Complete designation	Designation in this document
sonnenProtect 2500	sonnenProtect
sonnenBatterie hybrid 9.53	Storage system

1.3 Explanation of symbols



DANGER Extremely dangerous situation leading to certain death or serious injury if the safety information is not observed.



WARNING Dangerous situation leading to potential death or serious injury if the safety information is not observed.



CAUTION Dangerous situation leading to potential injury if the safety information is not observed.



NOTICE Indicates actions that may cause material damage.



i Important information not associated with any risks to people or property.

Symbol	Meaning
▶	Work step
1. 2. 3. ...	Work steps in a defined order
✓	Condition
·	List

2 Safety

2.1 Intended use

The sonnenProtect 2500 is an backup power unit designed to supplement the sonnenBatterie hybrid 9.53. The sonnenProtect- in conjunction with the appropriate storage system of the sonnen GmbH - serves to supply power in the event of a power failure. Any other use is considered improper use.

Improper use poses a risk of death or injury to the user or third parties as well as damage to the product and other items of value. The following points must therefore be observed in order to comply with the intended use of the product:

- Only operate the sonnenProtect together with the right storage system.
- The minimum capacity of the storage system required for the operation of the sonnenProtect is 5 kWh (2 battery modules).
- The sonnenProtect must be installed by a licensed electrician.
- The sonnenProtect must only be connected to the storage system as described here.
- Generators (e. g. a PV system) must never be connected after the output of the sonnenProtect.
- Intended use includes observing this document as well as all accompanying product documentation of the appropriate storage system.
- The sonnenProtect must only be installed and used at suitable installation location.
- The transport and storage conditions must be observed.

Especially the following uses are not permissible:

- Operation in flammable environments or areas at risk of explosion.
- Operation in locations at risk of flooding.
- Operation outdoors.



Failure to comply with the conditions of the warranty and the information specified in this document invalidates any warranty claims.

2.2 Requirements for the electrician

Improper installation can result in personal injury and/or damage to components. For this reason, the sonnenProtect must only be installed and commissioned by licensed electricians. Licensed electricians must meet the following criteria:

- The electrician must be a person with a technical knowledge or sufficient experience to enable him/her to avoid dangers which electricity may create.
- The electrician must have successfully completed the sonnen Australia installer training and have valid installer accreditation at the time of installation.

2.3 Operating the product

Incorrect operation can lead to injury to yourself or others and cause damage to property.

- The sonnenProtect must only be operated as described in the product documentation.
- This device can be used by children from the age of eight (8) years old and individuals with impaired physical, sensory or mental capabilities or individuals with limited knowledge and/or experience of working with the device, as long as they are supervised or have been trained to safely use the device and understand the resulting risks of doing so. Children must not play with the device.

2.4 Product modifications or changes to the product environment

- The sonnenProtect must only be used in its original state without any user modifications and only when in perfect working order.
- Safety devices must never be overridden, blocked or tampered with.
- The interfaces of the sonnenProtect and the storage system must be connected in accordance with the product documentation.
- All repairs on the sonnenProtect must be performed by authorised service technicians only.

2.5 Voltage inside the sonnenProtect



The sonnenProtect contains live electrical parts, which poses a risk of electrical shock. The storage system inverter also contains capacitors which carry voltage even after the storage system is switched off. As the sonnenProtect is connected to the inverter of the storage system, this means that the voltage from the inverter also flows into the sonnenProtect.

Therefore:

- ▶ Do not open the sonnenProtect.
- ▶ Do not remove any plastic covers.

3 Product description

3.1 Technical data

sonnenProtect 2500	
System data	
Rated active power	2,500 W
Rated apparent power	2,500 VA
Rated active power (30 sec.)	3,000 W
Rated apparent power (30 sec.)	3,000 VA
Output voltage	230 VAC +/- 10 %
Nominal frequency	50 Hz
Power factor range	0 capacitive ... 0 inductive
Max. input current	20 A
Max. output current	13 A
Short-circuit current	19.5 A
Network configuration in emergency operation	TN
Mains connection	single-phase, L / N / PE
Mains connection fuse	Miniature circuit breaker Type B 20 A
Operating concept	Single-phase power supply via emergency circuit(s). The switch to emergency operation takes place automatically through the storage system.
Switchover time	max. 15 seconds
Threshold power	none (starting from 0 W)
Dimension/Weight	
Dimension (H/W/D) in mm	230/200/122
Weight in kg	4.3
Safety / Protective devices	
Protection class	I / PE conductor
Degree of Protection	IP30
Overvoltage category	III
Protective functions	Overcurrent protection, fault current protection
Residual current device (RCD)	integrated (Type A 30 mA)
Ambient conditions	
Environment	Indoor (conditional)
Pollution degree	2
Operating temperature range	-5 °C ... 45 °C
Max. rel. humidity	90%, non-condensing
Permissible installation altitude	2,000 m above sea level
Additional ambient conditions	The ambient conditions prescribed for the storage system apply.

Table 1: Technical data

3.2 System components of the sonnenProtect

NOTICE

Observe permissible product combinations

The sonnenProtect 2500 with article number 3000352 may only be installed as an accessory for the sonnenBatterie hybrid 9.53 with article number 3000350 or 3000351. Installation with any other storage systems may result in damage!

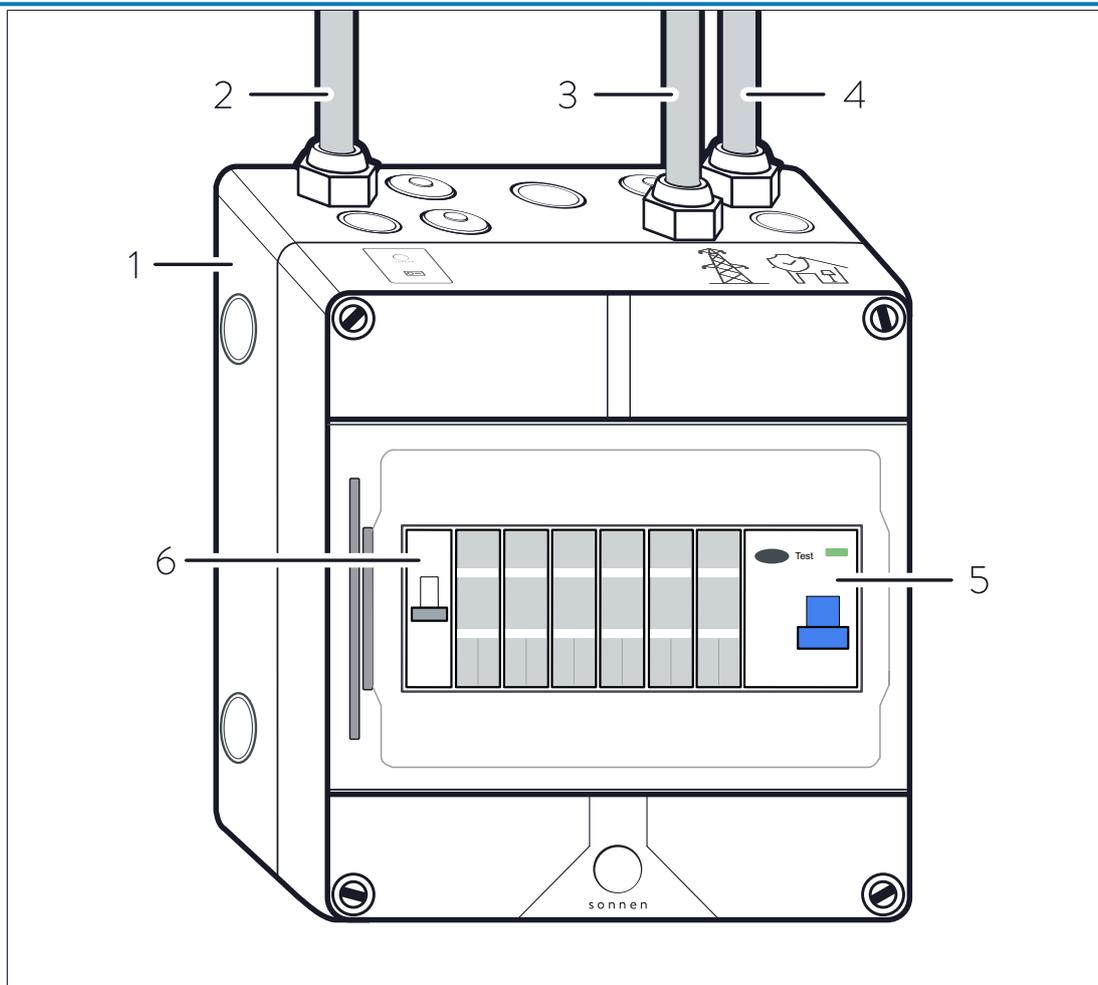


Illustration 1: System components of the sonnenProtect

- | | |
|------------------------------------|------------------------------------|
| 1 sonnenProtect | 4 Line to backup circuit |
| 2 Line from storage system | 5 Residual current device (F4.P) |
| 3 Line from electrical distributor | 6 Miniature circuit breaker (F3.P) |

3.3 Type plate


The type plate is located on the outer surface of the sonnenProtect. The type plate can be used to uniquely identify the sonnenProtect. The information on the type plate is required for the safe use of the system and for service matters.

The following information is specified on the type plate:

- Item designation
- Item number
- Technical data

A duplicate of the type plate for the sonnenProtect 2500 must be affixed by the installer to the storage system.

3.4 Symbols on the outside of the sonnenProtect

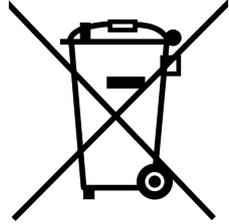Symbol	Meaning
	Warning: electrical voltage.
	Warning: electrical voltage. Wait five minutes after switching off (capacitor de-energising time).
	CE mark. The product meets the requirements of the applicable EU Directives.
	WEEE mark. The product must not be disposed of in household waste, dispose of it through environmentally friendly collection centres.
	
	Observe the documentation. The documentation contains safety information.
	RCM mark. The product meets the requirements of the applicable regulations.

4 Operation

4.1 Function

A storage system with sonnenProtect automatically switches from grid to backup operation (and vice versa). The two operating modes are described in the following.

4.1.1 Grid operation - no grid outage

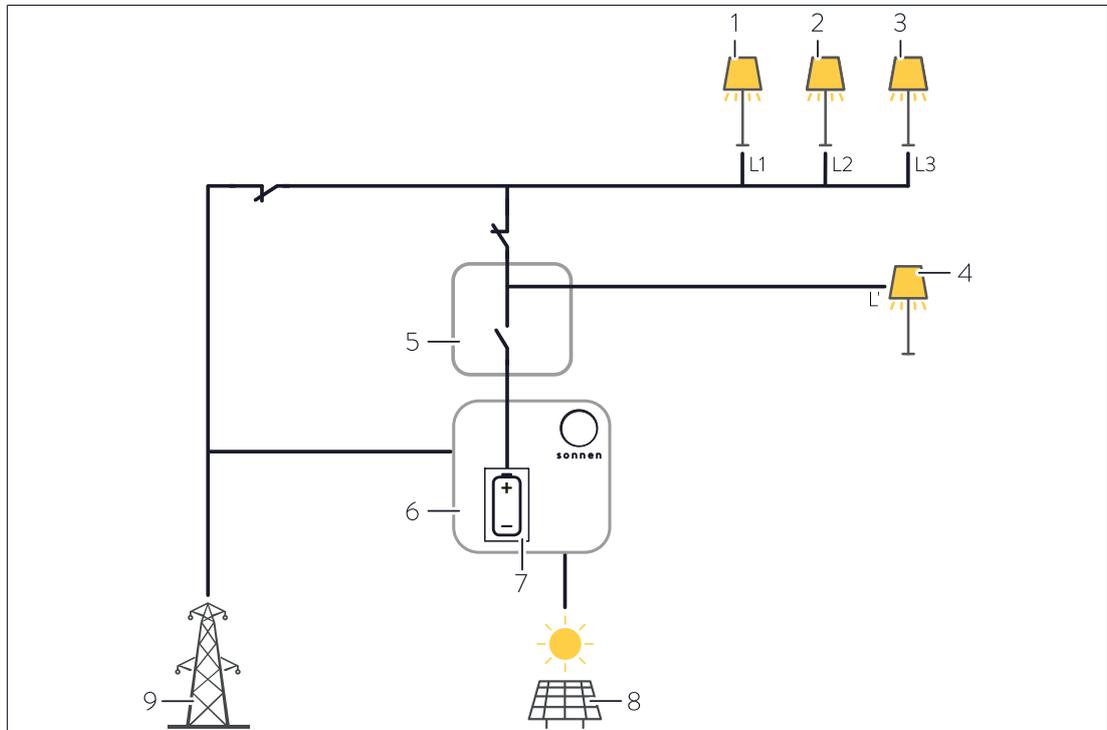


Illustration 2: Grid operation - no grid outage

- | | | | |
|---|--------------------------------------|---|-------------------------------|
| 1 | Consumer connected to phase L1 | 6 | Storage system |
| 2 | Consumer connected to phase L2 | 7 | Battery of the storage system |
| 3 | Consumer connected to phase L3 | 8 | PV system |
| 4 | Consumer connected to backup circuit | 9 | Public electricity grid |
| 5 | sonnenProtect | | |

In grid operation the consumers connected to phase L1 to L3 and the consumers connected to the backup circuit (1 - 4) are connected to the public electricity grid (9). All consumers in the house are supplied with electrical power. The storage system controls - as described in the product documentation of the storage system - the energy flows in the building.

4.1.2 Backup operation - grid outage

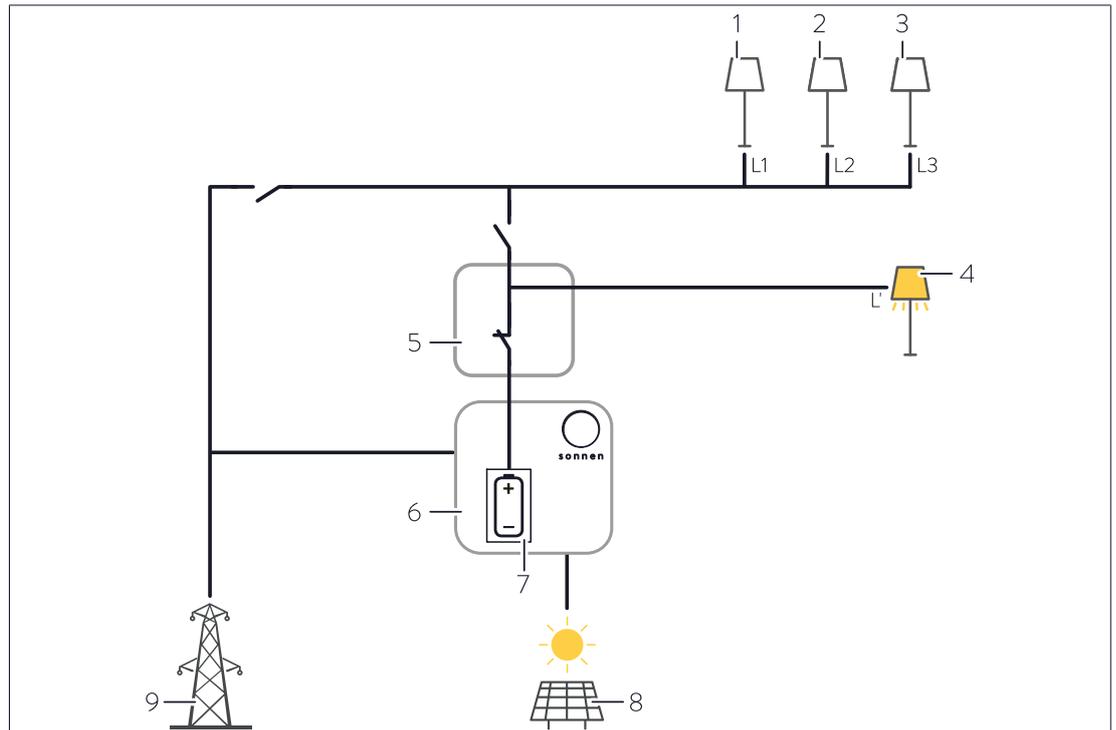


Illustration 3: Backup operation - grid outage

- | | | | |
|---|--------------------------------------|---|-------------------------------|
| 1 | Consumer connected to phase L1 | 6 | Storage system |
| 2 | Consumer connected to phase L2 | 7 | Battery of the storage system |
| 3 | Consumer connected to phase L3 | 8 | PV system |
| 4 | Consumer connected to backup circuit | 9 | Public electricity grid |
| 5 | sonnenProtect | | |

The sonnenProtect (5) automatically detects a grid outage. As soon as the voltage of the electricity grid drops to approx. 180 V, the connection to the public electricity grid (9) is disconnected.

Backup power is generated after max. 15 seconds. The consumers connected to backup circuit in the house (4) are thereby supplied with electrical power. Consumers connected to the phase L1, L2 or or L3 (1 - 3) will **not** be supplied with electrical power.

The switchover from grid to backup operation is signaled by the sonnen Eclipse (light ring) on the storage system. The color of the sonnen Eclipse changes from **white** (normal operation) to **green** (backup operation).

Electrical power generated by the PV system (8) continues to be used by the storage system to supply the consumers in the backup circuit and to charge the battery.

The storage system with sonnenProtect switches from backup to grid operation as soon as the public electricity grid (9) starts to deliver electrical power again.

Automatic stop and resumption of the backup operation

The storage system with sonnenProtect generates electrical power until a minimum state of charge of the battery is reached. Thereafter, no further discharge is allowed.

If the discharge has stopped due to the minimum state of charge, the storage system remains in this state until the PV system starts to produce electrical power again. From then on, the batteries of the storage system are charged and as soon as the state of charge exceeds the minimum limit, the surplus power is used to supply the electrical consumers in the backup circuit.

4.1.3 Backup operation - overload behaviour

Case 1: Overload detection by fuse

The integrated fuse (miniature circuit breaker F3.P) of the sonnenProtect protects the entire system against overload.

When the fuse trips, the storage system will still be in backup operation (Eclipse will turn **green**), but the electrical consumers in the backup circuit will no longer be supplied with power!

- ▶ In this case, switch off the electrical loads or reduce their power consumption and then switch on the miniature circuit breaker F3.P in the sonnenProtect.

Case 2: Overload detection by storage system

In special overload cases, the control of the storage system reacts earlier than the integrated fuse of the sonnenProtect. In this case, the miniature circuit breaker inside the sonnenProtect does not trip, the backup power is instead stopped by the control of the storage system. The eclipse of the storage system signals this by turning **orange**.

When this happens, there are two options:

1. The overload is removed: The storage system restarts the backup operation after a few minutes and the eclipse changes from **orange** to **green**.
2. The overload remains: The storage system tries to resume backup operation twice. If it is switched off a third time, the backup operation remains disabled until the grid outage is over. The eclipse will continue to glow **orange**.

4.2 Setting the backup buffer

Proceed as follows to set what percentage of the capacity of the storage system should be available for the sonnenProtect in the event of a grid outage.

Conditions:

- ✓ The storage system is connected to the router of the home network.
- ✓ Your laptop or PC also accesses the home network.
- ✓ The sonnenProtect was set up by the installer using the commissioning assistant 2.

Proceed as follows to access the storage system web interface:

- ▶ Enter the following address into your browser's address line: **https://find-my.sonnen-batterie.com**

The following window appears:




- ▶ Click on the blue LAN IP number.


The login page appears.

- ▶ Log in as user with the following password: **sonnenUser3552**

The Dashboard appears.

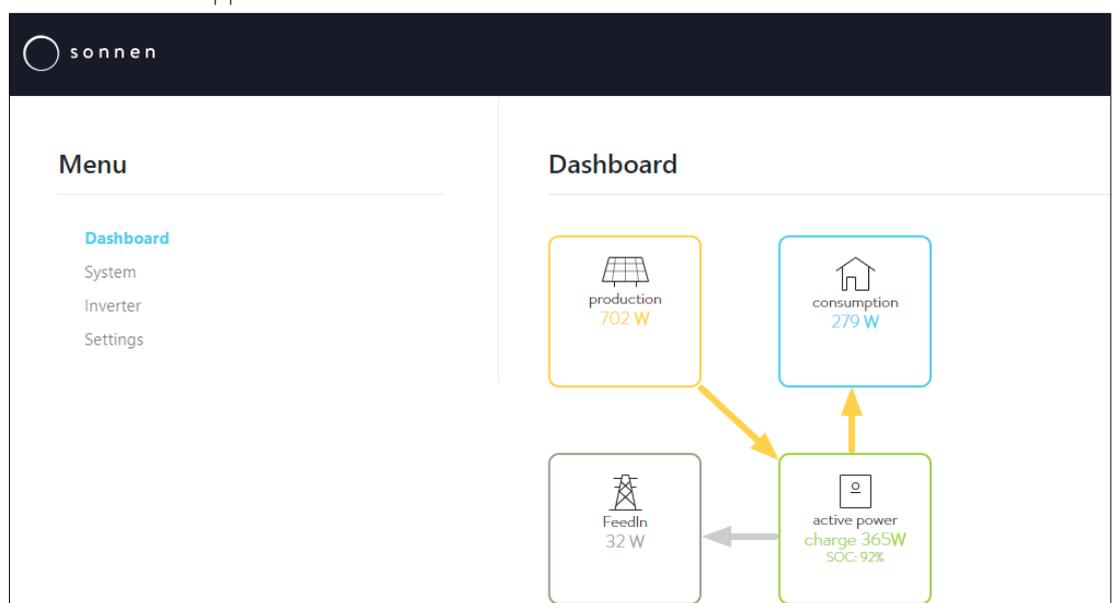

- ▶ On the web interface of the storage system, navigate to the Settings page.
- ▶ Change the percentage for backup-buffer to a desired value.

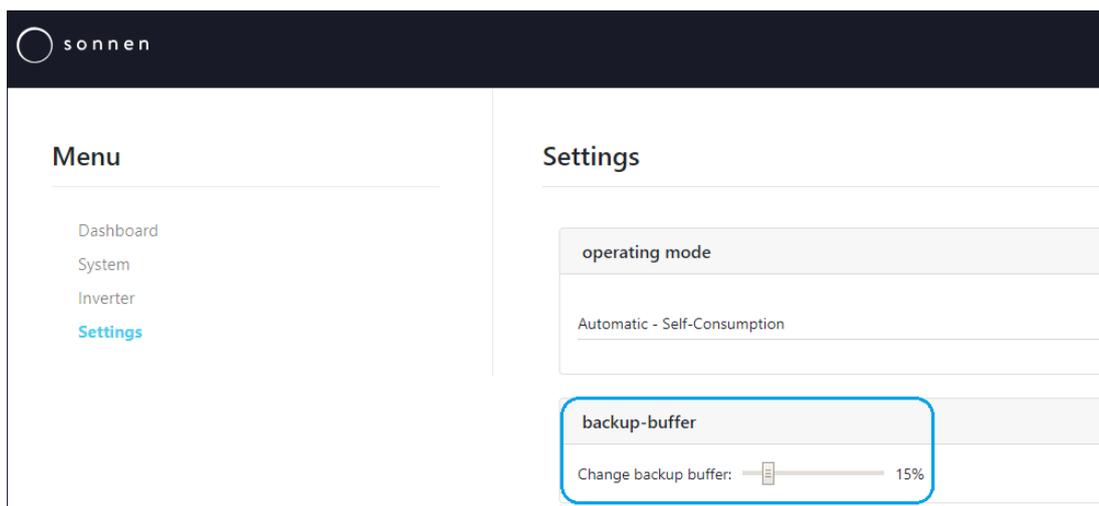

5 Switching off the sonnenProtect

To switch off the sonnenProtect manually, the following procedure can be carried out.

- ▶ Switch off the storage system as described in the relevant product documentation.

After switching off, the consumers connected to the backup circuit(s) can no longer be supplied with electrical energy from the battery of the storage system.

NOTICE

Deep-discharge of the battery modules

Destruction of the battery modules!

- ▶ Do not disconnect the storage system from the public electricity grid for long periods of time.
- ▶ Never continue to operate battery modules which have been deep-discharged.

6 Maintenance and Cleaning

6.1 Checking function

A residual current device (RCD) is installed in the sonnenProtect. The function of the RCD can be tested by pressing the test key (T). After pressing, the RCD must switch off (the backup circuit is interrupted).

Maintenance interval	Action to be taken
Every 6 months	▶ Check the function of the RCD with help of the Test key.

Table 2: Checking function

6.2 Cleaning

NOTICE

Use of unsuitable cleaning agent and/or excessive water

Material damage because of scratched surfaces and/or damage caused by penetration of water!

- ▶ Do not use scouring cloths, sponges or cleaning agent.
- ▶ Use only moist cloths, not wet cloths, to clean the system.
- ▶ Do not use water jets.

- ▶ Carefully clean the outside of the sonnenProtect with a clean, moist cloth. For tougher dirt, use a small amount of household dishwashing detergent on a moist cloth.

7 Uninstallation and disposal

7.1 Uninstallation

⚠ DANGER

Improper uninstallation of the sonnenProtect

Danger to life due to electrocution!

- ▶ The sonnenProtect must only be uninstalled by authorised electricians.

7.2 Disposal

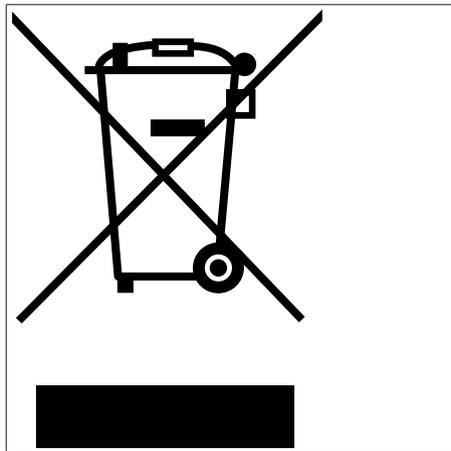


Illustration 4: WEEE symbol


The sonnenProtect must not be disposed of as domestic waste!

- ▶ Dispose of the sonnenProtect in an environmentally friendly way through suitable collection systems.

8 Troubleshooting

Fault	Possible causes	Rectification
Grid operation (no grid outage)		
The electrical consumers in the backup circuit are not supplied with energy in grid operation.	The lines of the backup circuit have not been connected correctly.	Contact your installer to check the electrical wiring.
	The miniature circuit breaker in the supply line of the sonnenProtect is switched off.	Switch on the miniature circuit breaker in the supply line of the sonnenProtect.
	The miniature circuit breaker (F3.P) in the sonnenProtect is switched off.	Switch on the miniature circuit breaker (F3.P) inside the sonnenProtect.
	The RCD (F4.P) in the sonnenProtect is switched off.	Switch on the RCD (F4.P) inside the sonnenProtect.
Backup operation (grid outage) - Backup operation does not start		
Backup operation doesn't start. The eclipse of the storage system is off .	The batteries of the storage system have discharged so much that further discharging would lead to a deep discharge state and therefore damage the batteries.	<p>If the PV system generates electrical power, the backup operation will continue as soon as excess power is available.</p> <p>If the PV system does not generate electrical power the only thing to do is wait until the grid outage passes and the public electrical grid once again starts supplying electrical energy. Then the sonnenProtect automatically switches to grid operation.</p>
	The storage system is switched off.	Switch on the storage system.
Backup operation doesn't start. The eclipse of the storage system is green .	The miniature circuit breaker (F3.P) in the sonnenProtect is switched off.	Switch on the miniature circuit breaker (F3.P) inside the sonnenProtect.
	The RCD (F4.P) in the sonnenProtect is switched off.	Switch on the RCD (F4.P) inside the sonnenProtect.
Backup operation doesn't start. The eclipse of the storage system is orange .	Electrical consumers with too high power consumption are connected to the backup circuit.	<p>Switch off electrical consumers or reduce their power consumption.</p> <p>Only connect electrical consumers to the backup circuit when they have a power consumption that does not exceed the nominal power or (when switching on) the maximum power of the sonnenProtect.</p>

Fault	Possible causes	Rectification
Backup operation (grid outage) - Backup operation stops		
Backup operation stops. The miniature circuit breaker and the RCD in the sonnenProtect have not switched off. The eclipse of the storage system is off .	The batteries of the storage system have discharged so much that further discharging would lead to a deep discharge state and therefore damage the batteries.	<p>If the PV system generates electrical power, the backup operation will continue as soon as excess power is available.</p> <p>If the PV system does not generate electrical power the only thing to do is wait until the grid outage passes and the public electrical grid once again starts supplying electrical energy. Then the sonnenProtect automatically switches to grid operation.</p>
Backup operation stops. The miniature circuit breaker (F3.P) in the sonnenProtect has switched off. The eclipse of the storage system is green .	The miniature circuit breaker detected an overload, this means electrical consumers with too high power consumption are connected to the backup circuit.	<p>Switch off electrical consumers so that the power consumption does not exceed the nominal power or (when switching on) the maximum power of the sonnenProtect.</p> <p>Then switch on the miniature circuit breaker (F3.P) again. The storage system automatically restarts the backup operation.</p>
Backup operation stops. The RCD (F4.P) in the sonnenProtect has switched off. The eclipse of the storage system is green .	The RCD has detected fault currents in the backup circuit.	Contact your installer to check the wiring and the connected electrical consumers and to correct the error.
Backup operation stops. The miniature circuit breaker and the RCD in the sonnenProtect have not switched off. The eclipse of the storage system is orange .	The control of the storage system detected an overload, this means there are electrical consumers connected to the backup circuit with a too high power consumption.	<p>Switch off electrical consumers so that the power consumption does not exceed the nominal power or (when switching on) the maximum power of the sonnenProtect.</p> <p>The storage system automatically restarts the backup operation. The eclipse of the storage system is green.</p> <p>If the backup operation does not start and the eclipse stays orange, the storage system has already unsuccessfully tried three times to start the backup operation. Then the only thing to do is wait until the connection to the public electrical grid can be restored.</p>

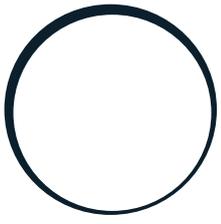

sonnen

energy is yours